

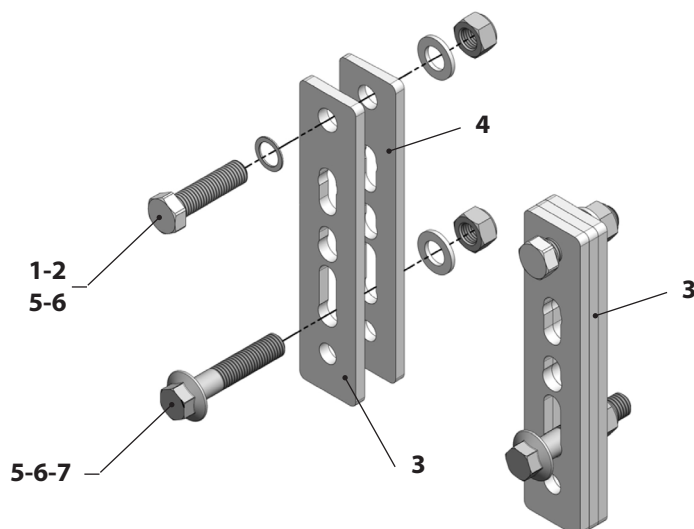


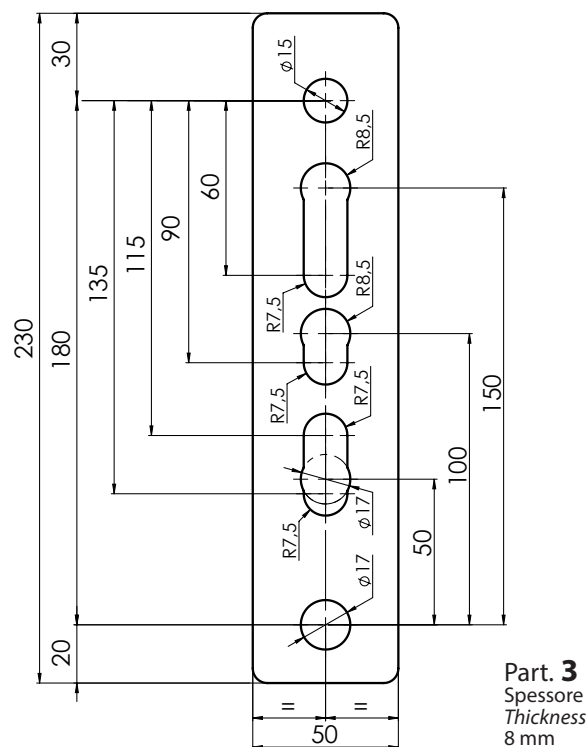

Pos.	Codice Code	Descrizione Description		Q.tà
1	50200700099	Vite Te M16 L60 Uni En 24017 Cl10.9	Screw	2
2	50102000165	Rondella Elastica Schnorr X M 16 Tipo S	Washer Schnorr X M16 Type S	2
3	53800401470	Staffa Distanziale H8 Fissaggio Serbatoio	Bracket H8	4
4	53800401514	Staffa Distanziale H8 Incl.2.5° Fsg.srb.	Bracket H8 Tapered 2.5°	1
5	50100700108	Rondella Piana X M 16 Zincata	Washer For M16	4
6	50501000141	Dado Atb.m16-Ch=24 H15 Cl.8 Uni 7474	Nut M16	4
7	50200001291	Vite Teflg.m16x80 Din6921 10.9 Geomet	Flanged Screw M16 L=80	2

Ingombro / Dimensions

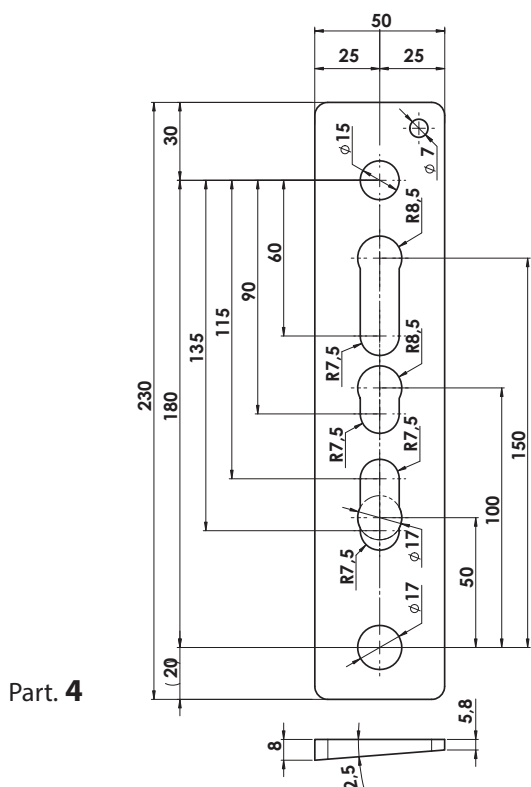

Istruzioni di montaggio / Mounting instructions

- 1 - Interporre tra il longherone del telaio del veicolo e le staffe di supporto del serbatoio i distanziali del kit come da schema per ottenere un perfetto allineamento.
- 2 - Fissare quindi definitivamente le staffe del serbatoio al telaio stesso utilizzando le viti M16 fornite nel kit ed i relativi dadi e rondelle. (coppia di serraggio 180Nm).
- 3 - Procedere poi al montaggio del serbatoio sulle proprie staffe seguendo le istruzioni specifiche.

- 1 - Insert the spacers of the kit like in above scheme for a perfect alignment between the cross member of the vehicle frame and the support brackets of the tank.
- 2 - Firmly tighten the support brackets of oil tank by using the M16 screws along with nuts and washers supplied in the kit (tightening torque = 180Nm).
- 3 - Mount then the oil tank onto the brackets by following the specific instructions.

